


Remote Operation

TV Mode

To use the features described in this section, make sure you are in TV mode by pressing the TV Mode button. 

Remote programming is required. See C-4 for instructions.

Note: If you have programmed the remote in Limited Mode (C-6), only the TV Power, Mute and Volume buttons will control your TV.



Note: Remote operation is different on DISH Network TVs. See your DISH Network TV User's Guide for proper operation.